



Caution

- Only use the central handle to extend and retract while keeping the screen level. Do not distort and touch the screen.
- Be sure to rotate the supporting foot to 90 degrees and place the screen horizontally on a flat surface during use. Uneven and unstable surfaces may cause tipping and result in personal injury.
- Be especially careful when setting up near children.
- When not in use and retracted, lay the screen horizontally. Using either end to support could cause tipping.
- Do not paste, doodle, and write on the screen.
- Do not iron the fabric.
- Keep the screen free from dirt or dust. If the screen becomes dirty, please wipe it gently with a soft cloth dipped in water. Benzene, thinner, and other volatile agents can cause permanent damage and should never be used for cleaning.
- Do not expose the screen to direct sunlight.
- Do not place the screen in the area susceptible to strong air currents. Airflow and breezes can cause screen movement and subsequently compromise image quality.

After-sales Service

If there is any issue or advice about the product, please do not hesitate to email us at service@raubay.net

 www.raubay.net

    @raubayofficial

